


TRANSFER SLIDE CLAMP INSTALLATION

(2)

BACK OUT ALL FOUR SCREWS ON CLAMP ENOUGH TO PLACE CLAMP OVER HOUSING

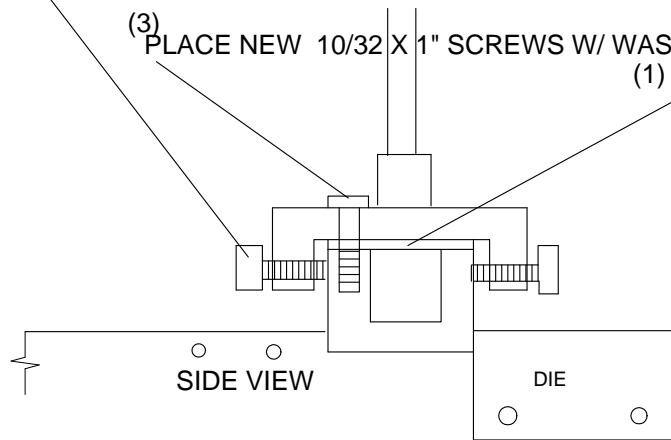

(3) PLACE NEW 10/32 X 1" SCREWS W/ WASHERS IN HOLES.

(1) REMOVE 2 10/32 X 3/8 SCREWS FROM PLASTIC HOUSING (BLACK)

(4) SQUARE UP CLAMP AS NEEDED AND SNUG 4 SCREWS AGAINST SIDES WITH SLIGHT PRESSURE THEN SNUG 2 SCREWS IN TOP COVER.